



# INSTRUCTION MANUAL

## Remote Meter: MT50



**Thank you very much for selecting our product!**

This manual offers important information and suggestions with respect to installation, use and troubleshooting, etc. Please read this manual carefully before using the product.





# *Remote Meter*

## **MT50**

Remote meter (Model MT50) is available to connect with solar controller LSxxxxB, VSxxxxB and TracerxxxxB.





# Contents

<b>1 Important Safety Instructions</b> .....	1
<b>2 General Information</b> .....	1
2.1 Features .....	1
2.2 Main functions .....	2
2.3 Recommendations .....	3
<b>3 Installation</b> .....	3
<b>4 Product Features</b> .....	7
4.1 Monitoring screen .....	10
<b>5 Operation</b> .....	11
5.1 Buttons .....	11
5.2 Main menu .....	12
5.3 Real-time monitoring .....	12
5.4 Device information .....	14
5.5 Test operation .....	14
5.6 Control parameter .....	15
5.7 Load setting .....	19
5.8 Device parameter .....	23
5.9 Device password .....	24
5.10 Charge mode .....	24
5.11 Factory reset .....	25
5.12 Failure information .....	25
5.13 Meter parameter .....	26
<b>6 Technical Specifications</b> .....	27





## 1 Important Safety Instructions

### SAVE THESE INSTRUCTIONS:

This manual contains important safety, installation and operating instructions for the Remote Meter.

### General safety information

- Please inspect the MT50 thoroughly after it is delivered. If any damage is seen, please notify the shipping company or our company immediately. A photo of the damage may be helpful.
- Read all instructions and cautions in the manual before starting the installation.
- Keep the MT50 away from rain, exposure, severe dust, vibrations, corrosive gas and intense electromagnetic interference.
- Do not allow water to enter remote meter.
- There are no user serviceable parts inside the controller. Do not disassemble or attempt to repair it.

## 2 General Information

### 2.1 Features

The new-generation remote display unit MT50 for LSxxxxB, VSxxxxB and TracerxxxxB controllers is an associated display device which supports both





the latest communication protocol and the voltage technology standard of solar controllers. The products have many excellent functions:

- Automatic identify and display the type, model and relevant parameter data of controllers;
- Real-time display the operational data and working status of the connection devices in digital, graphic and textual forms by a large-screen multifunction LCD;
- Direct, convenient and rapid operation of six navigation function keys;
- Both data and power flowing on the same lead, no need for external power;
- Real-time data monitoring and remote load switchover of the controllers, and data browse and modification of device parameters, charge control parameters and load control parameters;
- Real-time display and acoustic alarm of failure information of the connection devices;
- Longer communication distance based on RS485.

## 2.2 Main functions

Functions like the real-time monitoring of the operational data and working status of a controller, the browse and modification of charge/discharge control parameters, the setting of device parameters and load control parameters and the restoration of factory defaults, based on LCD display and functional key operation.






## 2.3 Recommendations

- Please confirm that MT50 is only allowed to connect with our LSxxxxB, VSxxxxB and TracerxxxxB series controllers before purchase;
- Please do not install MT50 in a situation with strong electromagnetic interference.

## 3 Installation

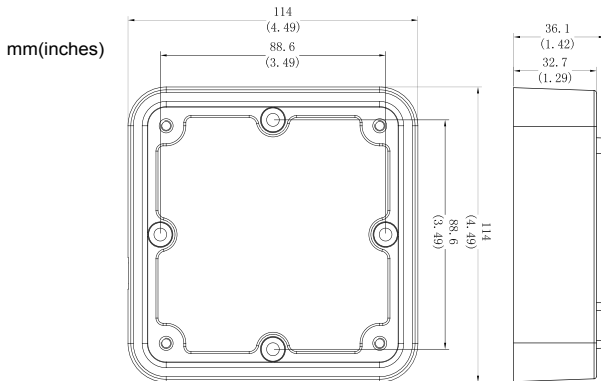

Frame Mount Dimensions






Mechanical parameter	Parameter
Overall dimension	114 x 114 x 32.7mm 4.49 x 4.49 x 1.29inches
Mounting dimension	88.6x 88.6mm 3.49 x 3.49inches
Terminal	Φ4.3

## Wall installation steps

**Step 1:** Locate and drill screw holes based on the Frame Mounting dimension of the base, and erect the plastic expansion bolts;

**Step 2:** Use four ST4.2×32 self-tapping screws to fix the Frame;

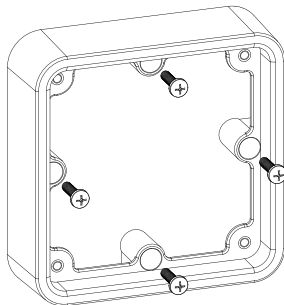

Frame Mounting








**Step 3:** Use four M4×8 pan head screws to mount MT50 Surface on the Frame;

**Step 4:** Mount the four associated screw plugs into the screw holes.

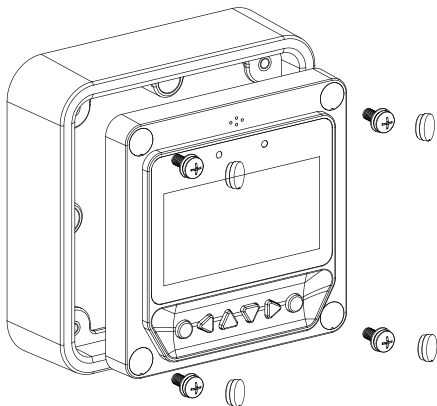

Surface Mounting




## Steps of surface mounting:

**Step 1:** Locate and drill screw holes based on the installation size of the Surface;

**Step 2:** Use four M4×8 cross recessed pan head screws with M4 nuts to mount MT50 Surface onto the panel;


**Step 3:** Mount the four associated white screw plugs into the screw holes.

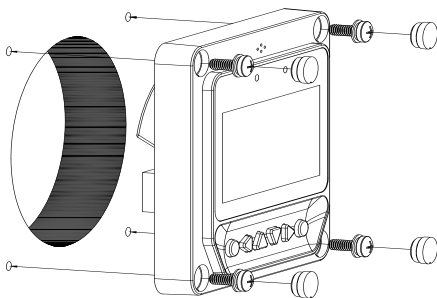

Surface mounting


**Notice:** Take full consideration of the plugging/unplugging space of the communication cable and the length of the cable during installation to see if they are appropriate.

## 4 Product Features

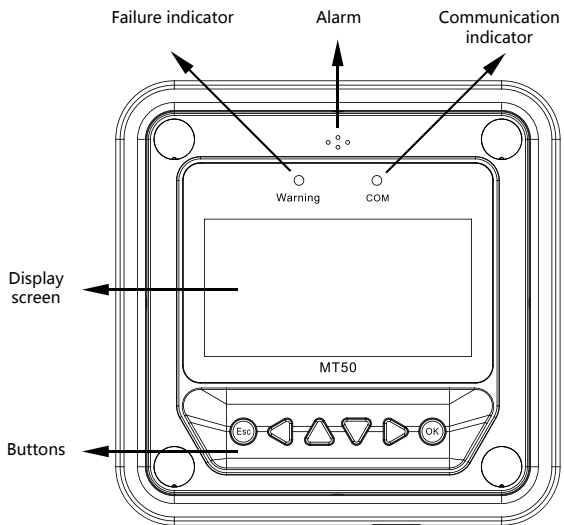



RS485 communication and power interface

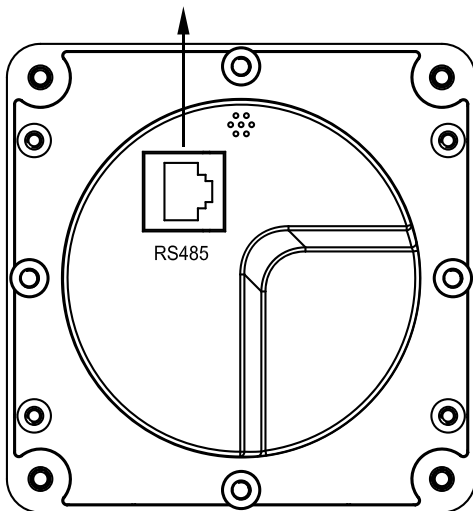

Rear View





### **Failure indicator**

Failure indicator flashes in case of failure of the connection devices. For failure information please check the Controller Manual.

### **Alarm**

Fault audible alarm, could be activated or deactivated.

### **Communication indicator**

Indicate communication status when MT50 is connected with the controller.

### **Display screen**

Man-machine interaction operation interface.

### **Buttons**

The Meter buttons includes four navigation buttons and two operational buttons. See the specific directions in the Operational Manual.


### **RJ45 communication and power interfaces**

Communication and power supply cable interfaces, used for communication connection with controllers.

**Note: Please use the communication plug which is marked with “MT” to connect MT50**



## 4.1 Monitoring screen

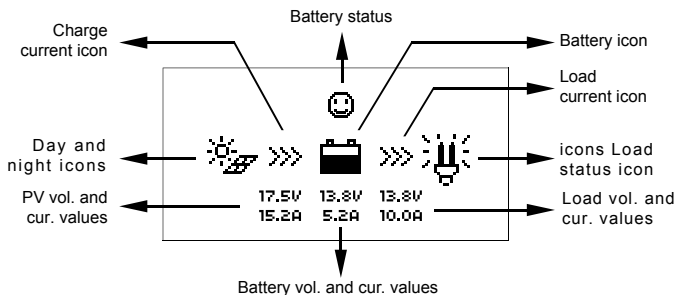

### Day and night icons

☾ -Night , ☀ -Day: The threshold voltage is 1V. Higher than 1V is daytime.

### Charge current icon

The icon is dynamically if there is charge current.

### Battery icon

The battery capacity is dynamically displayed based on the SOC value calculated by the controllers.

**Note: When the battery is in over discharge status, the icon displayed is "☹".**



### Battery status icons

😊 - Normal voltage, 😐 - Under voltage, ☹ - Over discharge.

## Load current icon


The icon is dynamically if there is discharge current.

## Load status icon


 - Load ON,  - Load OFF.

# 5 Operation

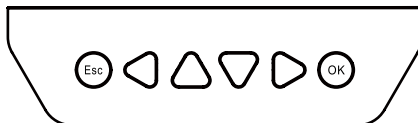

## 5.1 Buttons

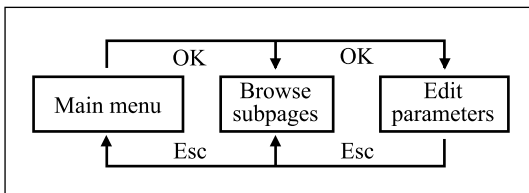








The buttons are respectively (from left to right) “ESC”, “Left”, “Up”, “Down”, “Right” and “OK” buttons, the operation is described in the schematic operation diagram below:




**Schematic operation diagram**




The default entry page is the browse mode. Pressing  button and inputting the correct password to enter the modification mode;  and  buttons could be used to move the cursor,  and  buttons could be used to modify the parameter values when the cursor is located at the current place;  and  buttons could be finally used to respectively confirm and cancel the modification of the control parameters.

## 5.2 Main menu



“Up” and “Down” buttons are respectively used to move the cursor to select the menu items, “OK” and “ESC” buttons are respectively used to enter or exit the corresponding pages of the menu items.



1 Monitoring
2 Device Info.
3 Testoperation
4 Control Para.


5 Load set
6 Device Para.
7 Device PSW
8 Charge Mode

9 Factory Reset
10 Failure Info.
11 Meter Para.





## 5.3 Real-time monitoring

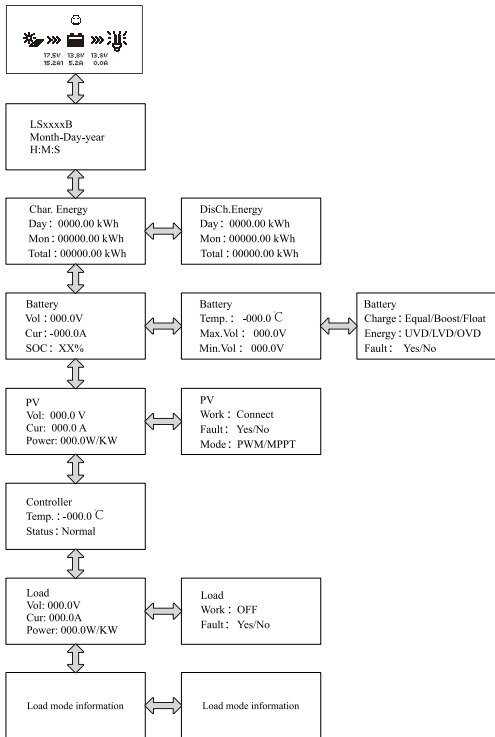There are 14 pages under real-time monitoring. Please check it as below:









**Operational tips:**  and  buttons are respectively used to turn the browse page upward and downward, while  and  buttons are respectively used to turn the interfaces left and right.

## 5.4 Device information

The product model, parameters and SN code of the controllers are displayed below:

1. <table border="1"><tr><td>Product type</td></tr><tr><td>Rate.Vol: XX V</td></tr><tr><td>Char.Cur: XX A</td></tr><tr><td>Disc.Cur: XX A</td></tr></table>	Product type	Rate.Vol: XX V	Char.Cur: XX A	Disc.Cur: XX A	2. <table border="1"><tr><td>Product type</td></tr><tr><td>SN: 16 Digit code</td></tr></table>	Product type	SN: 16 Digit code
Product type							
Rate.Vol: XX V							
Char.Cur: XX A							
Disc.Cur: XX A							
Product type							
SN: 16 Digit code							

**Operational tips:**  and  buttons are respectively used to turn the browse page upward and downward.





## 5.5 Test operation

Load switch test operation is conducted on the connection solar controller to see if the load output is normal. The test operation does not affect the working settings under actual load, which means that the solar controller will exit from the test mode when exiting the operational interface of the test.





Test Operation  
Product Type: ON/OFF

**Operational tips:** Enter the page and input correct password; use  and  buttons to modify the ON/OFF status values, while use  and  buttons respectively to confirm and cancel the test operation.

## 5.6 Control parameter

Browse and modification operations are conducted over the control parameters of solar charge controller. See the scope of parameter modification in control parameters table, and the page of control parameters in the diagram below:





- |     |  |    |  |    |   |
|-----|--|----|--|----|---|
| 1.  | Batt.Type<br>Sealed<br>Batt.AH<br>xxxxAH             | 2. | Temp Comp.Coeff.<br>-X mv/°C/2V<br>Rated Voltage<br>Auto | 3. | Over Volt. Disc.<br>xx.xV<br>Charge Limit<br>xx.xV  |
| 4.  | Over Volt.Rec.<br>xx.xV<br>Euqal. Charge<br>xx.xV    | 5. | Boost Charge<br>xx.xV<br>Float Charge<br>xx.xV           | 6. | Boost Rec.<br>xx.xV<br>Low Volt.Rect.<br>xx.xV      |
| 7.  | Under Volt.Rect<br>xx.xV<br>Low Volt. Disc.<br>xx.xV | 8. | Low Volt.Rect<br>xx.xV<br>Discharge Limit<br>xx.xV       | 9. | Batt.Char. SOC<br>xxx %<br>Batt.DisCh. SOC<br>xxx % |
| 10. | Equalize Time<br>xxxMin<br>Boost Time<br>xxxMin      |    |  |    |   |





### Control parameters table

Control parameters		
Parameters	Default	Range
Battery type	Sealed	Sealed/Gel/Flooded/User
Battery Ah	200Ah	1~9999Ah
Temperature compensation coefficient	-3mV/°C/2V	-9~0 mV/°C/2V
Rated voltage	Auto	Auto/12V/24V/36V/48V Depends on the versions of the controllers
Charging SOC	100%	Fixed Value
Discharging SOC	30%	10~80%

### Battery voltage parameters

(Parameters is in 12V system at 25°C , please use X 2 in 24V, X 3 in 36 V, and X 4 in 48 V system)





### Control voltage parameters

Battery charging setting	Gel	Sealed	Flooded	User
Over voltage disconnect voltage	16.0V	16.0V	16.0V	9~17V
Charging limit voltage	15.0V	15.0V	15.0V	9~17V
Over voltage reconnect voltage	15.0V	15.0V	15.0V	9~17V
Equalize charging voltage	—	14.6V	14.8V	9~17V
Boost charging voltage	14.2V	14.4V	14.6V	9~17V
Float charging voltage	13.8V	13.8V	13.8V	9~17V
Boost reconnect charging voltage	13.2V	13.2V	13.2V	9~17V
Low voltage reconnect voltage	12.6V	12.6V	12.6V	9~17V
Under voltage warning reconnect voltage	12.2V	12.2V	12.2V	9~17V
Under voltage warning voltage	12.0V	12.0V	12.0V	9~17V
Low voltage disconnect voltage	11.1V	11.1V	11.1V	9~17V
Discharging limit voltage	10.6V	10.6V	10.6V	9~17V
Equalize duration	—	2 hrs.	2 hrs.	0~3 hrs.
Boost duration	2 hrs.	2 hrs.	2 hrs.	0~3 hrs.






**Note: Battery voltage setting please in strict accordance with:**

1. Over Voltage Disconnect Voltage > Charging Limit Voltage  $\geq$  Equalize Charging Voltage  $\geq$  Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Reconnect Charging Voltage;
2. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage ;
3. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit Voltage;
4. Under Voltage Warning Reconnect Voltage > Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage;
5. Boost Reconnect Charging Voltage > Low Voltage Disconnect Voltage.

**5.7 Load setting**

The page of load setting could be used to set the four load working modes of the connection solar controller (Manual, Light on/off, Light on+timer, Time control).



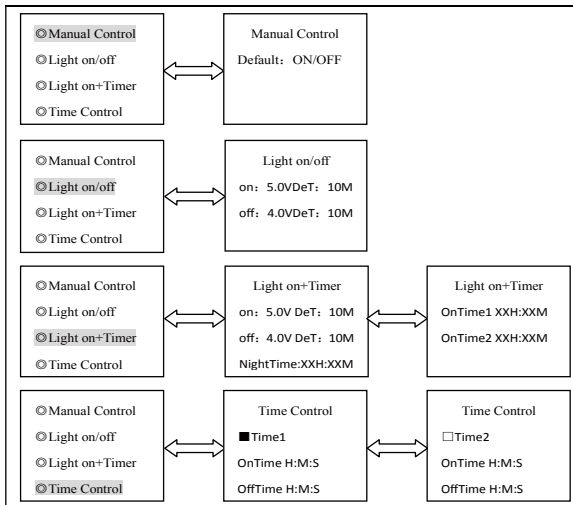

## ① Manual control

Manual control

Mode	Introductions
ON	Load is on all the time if battery capacity is enough and no abnormal conditions happen.
OFF	Load is OFF all the time.





## ② Light ON/OFF


Light ON/OFF

Light ON voltage(Night threshold)	When input voltage of solar module is lower than light ON voltage, it automatically turns ON load output if battery capacity is enough and no abnormal conditions happen.
Light OFF voltage(Day threshold)	When input voltage of solar module is higher than light OFF voltage, it automatically turns off load output.
Delay time	The confirmation time for Light signal. During the period, if light signal voltage continues matching Light ON/OFF voltage, it will carry out corresponding actions ( The time adjustment range:0~99mins ) .

## ③ Light ON+ timer

Light ON+ timer

Working time 1 ( T1 )	Load working period after light control turns ON load	Any of the working time is set as "0", it means thistime will stop working. The real working time of T2 depends on the Night time, and the length of T1, T2.
Working time 2 ( T2 )	Load working period before light control turns off load	
Night time	Total night time controller get from calculation ( ≥3h )	

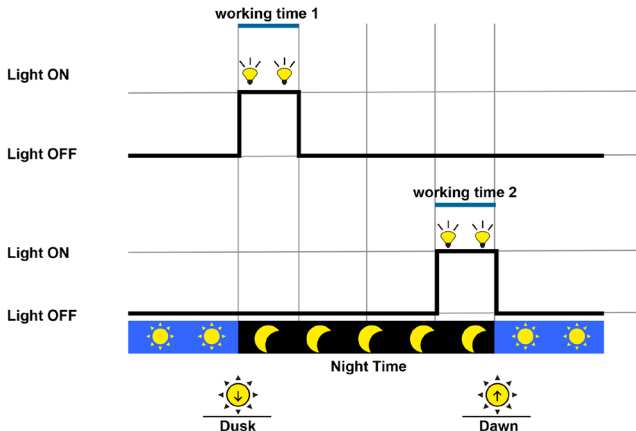

#### ④ Time control


Time control

Working time1 (T1)	Control on/off time of load through real-time clock mode.	Working time 1 is the compulsory load working time interval. Working time 2 is an optional.
Working time2 (T2)	Realize the dual timer function of the load control through real-time clock mode.	



## 5.8 Device parameter

The software version information of solar charge controller could be checked via the page of device parameters, and device data like device ID, device LCD backlight time and device clock could be checked and modified. The page of device parameter in the diagram below:

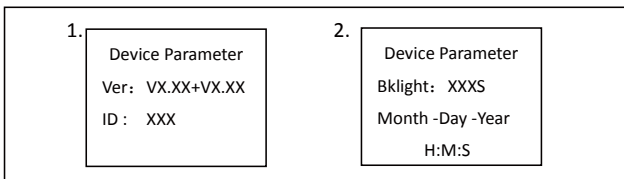

**Note: the bigger the ID value of the connection device, the longer the Meter communication identification interval (the maximum interval < 6 minutes).**

Type	Notes
Ver	Solar charger controller software and hardware version numbers.
ID	Solar charger controller communication ID numbers.
Bklight	Solar charger controller LCD backlight working time.
Month-Day-Year H:M:S	Solar charger controller internal clock.



## 5.9 Device password

The password of the solar charge controller could be modified via the page of device password; the device password is a 6-digit figure which is required before entering the modification mode of “Control parameter”, “Load setting”, “Device parameter”, “Device password”, “Factory reset” pages. The page of device password in the diagram below:

Device PSW OriPSW: XXXXXXX NewPSW: XXXXXXX
--



**Note: Solar charge controller default password is”000000”**



## 5.10 Charge mode

The charge mode of solar charge controller could be selected via the page of charge mode (Voltage Compensate, SOC); the default charge mode is Voltage Compensate charge mode.

Charge Mode Vol.Compen./SOC
--------------------------------

Charging mode	Notes
Vol.Compen.	Voltage compensation : Voltage control charging (default)
SOC	By setting the charge and discharge SOC target values for battery charge and discharge control

### 5.11 Factory reset

The default parameter values of solar charge controller could be restored via the Factory reset page, which means the “Control parameter”, “Load setting”, “Charge mode” and “Device password” of the devices could be restored to the factory defaults (the factory default password of the devices is “000000”).

Factory Reset	
Yes	No

### 5.12 Failure information

The current failure information of the solar charge controller could be checked via the Failure information page (a maximum of 15 failure messages could be displayed); when the failures of solar charge controller are eliminated, the corresponding failure information will also be automatically eliminated.



Failure Info.  
1 Over voltage  
2 Over load  
3 Short circuit

### 5.13 Meter parameter

The meter model, software and hardware version, and SN NO. could be checked via Meter parameter page. And the three parameters (Switch pages, Backlight, Audible alarm) could be browsed and modified as well.

1. <p>Meter Para. Type: MT50 Ver: Hardware + Software Sn: XXXXXXXXXXX</p>	2. <p>Meter Para. Sw-Pages: XXS BKLight: XXS AudiAlarm: on/off</p>
---	--

**Note: When the set up is accomplished, the auto switch page cannot become effective until ten minutes later.**





Meter parameter			
Parameters	Default	Range	Remark
Sw-Pages	0	0~120S	The automatic switchover inverter for real-time monitoring page
BKlight	20	0~999S	LCD backlight time
AudiAlam	OFF	ON/OFF	Turn ON /OFF the acoustic alarm function in case of failure on solar charge controller

## 6 Technical Specifications

### ELECTRICAL

Electrical parameter	
Self-consumption	Backlight and acoustic alarm ON<65mA
	Backlight ON<23mA
	Backlight OFF<15mA





## MECHANICAL

Mechanical parameter	
Faceplate dimensions	98×98 mm / 3.86×3.86 inches
Frame dimensions	114×114 mm / 4.49×4.49 inches
Connector type	RJ45
Meter cable	Standard 2m, Max 50 m
Meter weight	Simple package: 0.23 Kg Standard package: 0.32 Kg

## ENVIRONMENTAL

Environmental parameter	
Ambient temperature	-20°C~+70°C/-4°F~158°F








## Definitions of interface pins

Pin No.	Definition
1	Power+12V input
2	RS485 B
3	RS485 A
4	GND
5	GND
6	RS485 A
7	RS485 B
8	Power+12V input

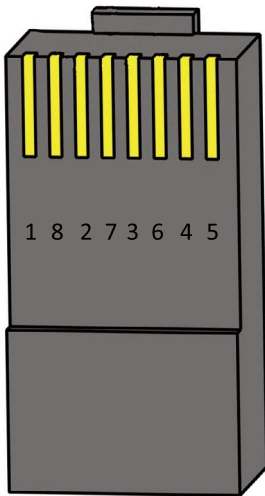





Data cable pin definitions





# REMOTE METER DIMENSIONS

mm(inches)

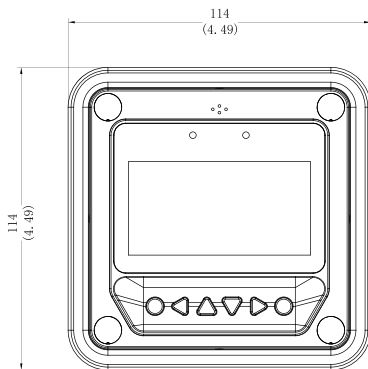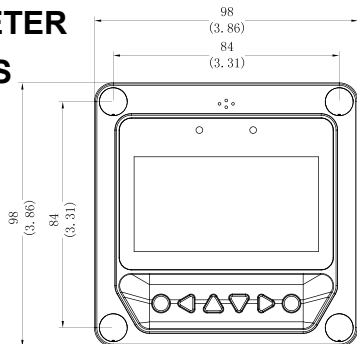

Ver1.5

30







**BEIJING EPSOLAR TECHNOLOGY CO.,LTD.**

Tel: +86-10-82894112 / 82894962

Fax: +86-10-82894882

E-mail: [info@epsolarpv.com](mailto:info@epsolarpv.com)

Website: <http://www.epsolarpv.com/>

